


Filter replacement procedure

Replace filter


Replace filter

- Turn off the fan
- Close the registers upstream and/or downstream (if present)
- Level the pressure (if balance valve is present)
- Loosen the star knobs and remove the door
- Release the filters by turning the handles horizontally

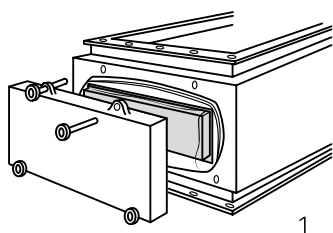

1

- Unroll the plastic bag
- Pull the filter into the plastic bag and place it on a flat surface or maintenance table

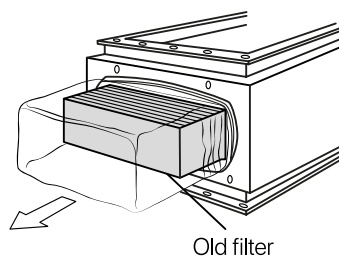


Old filter

2

Sealing the plastic bag

- Flatten the bag without creases
- Seal the bag with a thermal welding machine at 2 points and cut the bag between the 2 welds

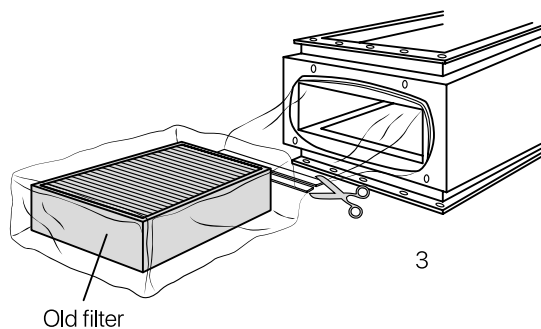


Old filter

3

Placing a new filter

- Place the filter in the bag with the seal facing up towards the air inlet
- Place the elastic of the new plastic bag over the groove around the opening of the housing

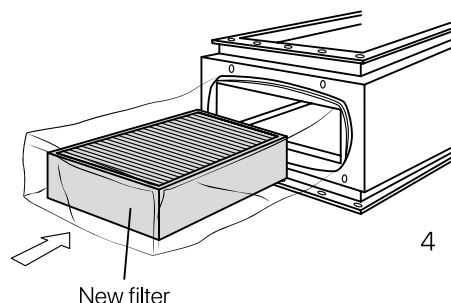


New filter

4

Remove the rest of the old plastic bag

- Detach the remainder of the old bag from the housing and pull it into the recess provided in the new bag
- Slide the new filter into place in the housing without damaging the seal
- Use the lever system to tighten the filter
- Roll up the plastic bag with the remainder of the old bag and place it against the filter
- Replace the door and tighten the knobs

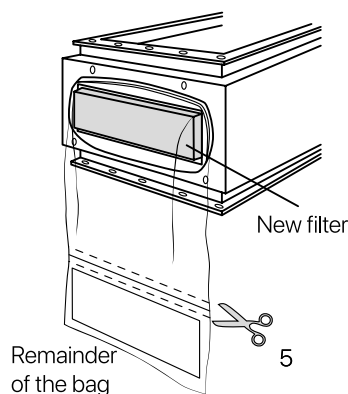

New filter

Remainder of the bag

5